


# Column Pay-out Pulley Keeper Retrofit Instructions #3812

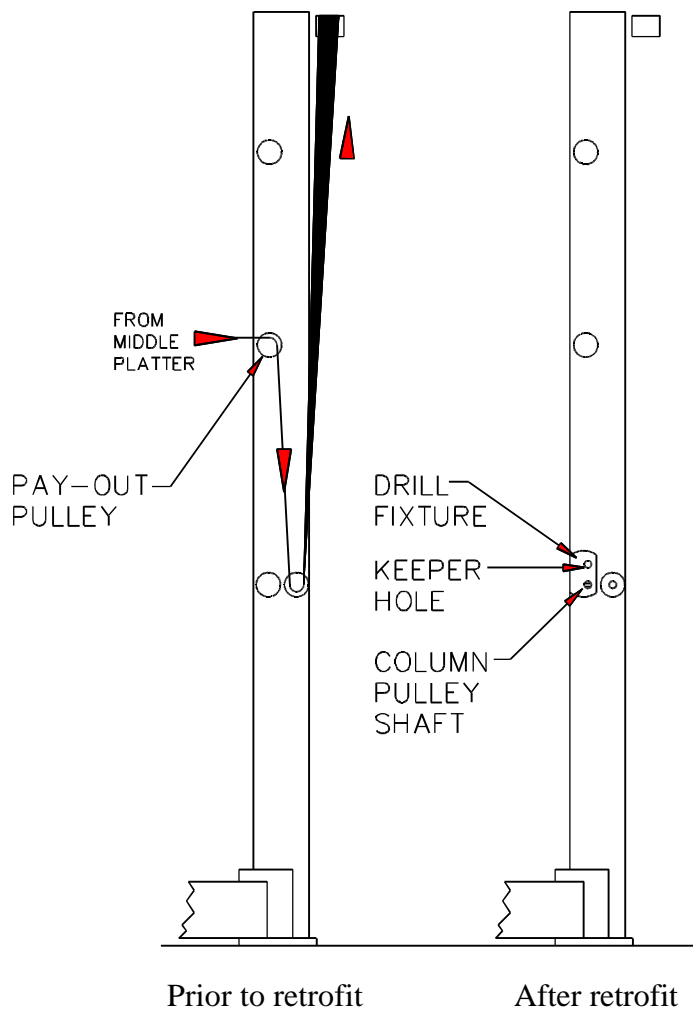

1. Remove the E-rings, slide the three Column Payout Pulleys off of the Column Pulley Shafts, and remove the inboard E-rings.
2. Slide the Drill Fixture onto a Column Pulley Shaft. Align the left edge of the fixture with the edge of the column.
3. Spot drill the Keeper Hole with the provided #3 drill bit.
4. Remove the Drill Fixture, finish drilling the Keeper hole, and tap with the provided 1/4-28 tap. Use a light weight oil when tapping.
5. Repeat steps 2-4 for the other two Payout Pulleys.
6. Insert the three new column pulley shafts into the Keeper Holes.
7. Slide the Payout Pulleys and Keepers onto their shafts.

## Ordering Information

Keeper Spool Retrofit 3 Deck Platter.....3819  
 (3 keeper spools and shafts)  
 Keeper Spool Retrofit Drill Fixture Kit.....3821  
 (drill, tap and drill fixture)