


Variac Assembly, Arm Mount #3415 and Variac Assembly, Leg Mount #2526 Installation Instructions #4489

The Arm Mount Variac (#3415) and the Leg Mount Variac (#2526) are shipped wired for use on platters pre-wired for an **Optional** Wrap Detector. When installed on platters pre-wired for a Wrap Detector, **no** modifications are needed. When installed on platters **not** pre-wired for a Wrap Detector the wiring **must be reconfigured** as shown below.

To determine if your platter is pre-wired for a Wrap Detector count the number of contacts in the 9-pin plug connecting the column to the variac.

Column plugs for Arm mount variacs on platters **pre-wired** for a Wrap Detector have **seven** contacts.
Column plugs for Arm mount variacs on platters **not pre-wired** for a Wrap Detector have **five** contacts.
Column plugs for Leg mount variacs on platters **pre-wired** for a Wrap Detector have **five** contacts.
Column plugs for Leg mount variacs on platters **not pre-wired** for a Wrap Detector have **three** contacts.

NOTE: If either variac #3415 or #2526 is installed on a platter **not** pre-wired for a wrap detector **without** reconfiguring the wiring as shown below, the platter will not power up.

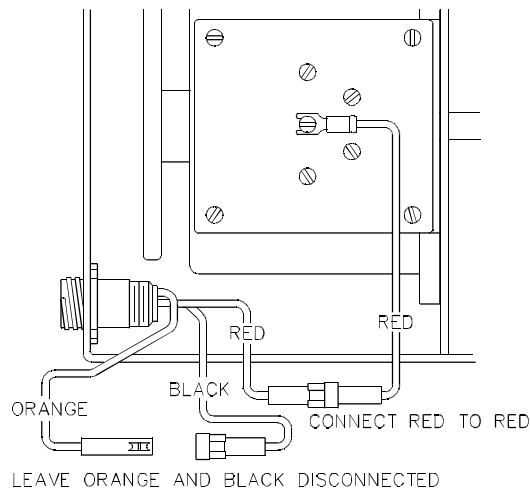

To reconfigure the variac for a non pre-wired platter:

CAUTION: TO AVOID ELECTRICAL SHOCK HAZARD turn the power switch OFF and unplug the power.

Remove the variac cover and disconnect the **black** and **orange** wires. Connect the two **red** wires together as shown. Leave the **orange** wire and **black** wire disconnected.