

# MAKE-UP TABLE LIGHT SWITCH WIRING MODIFICATION

PRODUCT INFORMATION BULLETIN #7244



## WARNING

Make-up Tables with serial numbers between 20764 and 24031 may be wired so the light switch wire could contact the rotating drive sheave during operation, resulting in an electrical short which could cause serious injury.


Check the yellow wire from the light switch (see arrow in illustration A) for signs of rubbing. If the wire shows no signs of wear, disconnect the wire and re-route it behind the transformer and re-connect to the transformer. A cable tie should be used to secure the wire to the other yellow wire from the switch.

If the wire does show signs of wear, a wiring harness is available to eliminate the possibility of an electrical short. This will be provided free of charge by Design & Manufacturing, Inc. Order part number 6811.


**Installation:** *Disconnect the table from the power supply.* Set the table on its back and remove the bottom cover. Remove the wire connecting the light assembly fuse to the light switch. Also remove the wire connecting the light switch to the transformer terminal number 1.

Install the new harness so the short wire connects the fuse to the light switch terminal nearest the table top. Install the longer wire between the remaining switch terminal and terminal number 1 at the transformer (see illustration B).

**IMPORTANT:** Route the longer wire behind the light fuse as shown in illustration B.

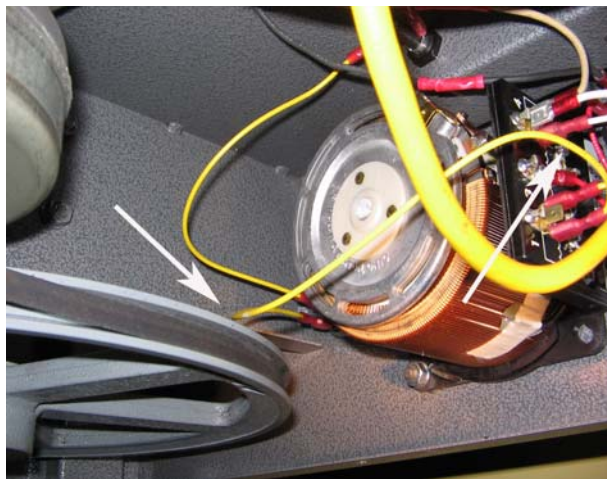

**Illustration A**  
Before modification

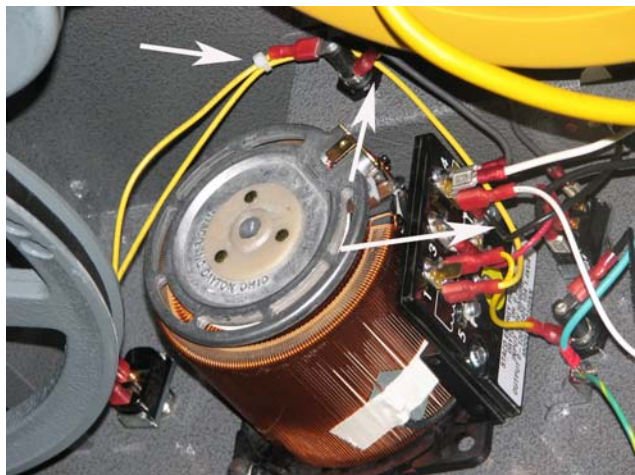

**Illustration B**  
After modification

Manufactured in U.S.A by Design & Manufacturing, Inc. Fisher, IL 61843  
[www.design-mfg.net](http://www.design-mfg.net) or Phone:217/897-1172